

Coplax AG
Sihlbruggstrasse 107, 6340 Baar – Switzerland
Phone no: +41 41 766 8330

www.stylies.ch

stylies®






PEGASUS - PURIFIER



Gebrauchsanweisung Deutsch	2
Instruction Manual English	8
Mode d'emploi Français	14
Manuale di istruzioni Italiano	20
Instrukcja obsługi Polski	26
Gebruiksaanwijzing Dutch	32
Käyttöohje Suomi	38
Instrucciones de uso Español	44
Návod k použití Čeština	50
Návod na použitie Slovenčina	56

stylies®

PEGASUS - LUFTREINIGER - PURIFIER

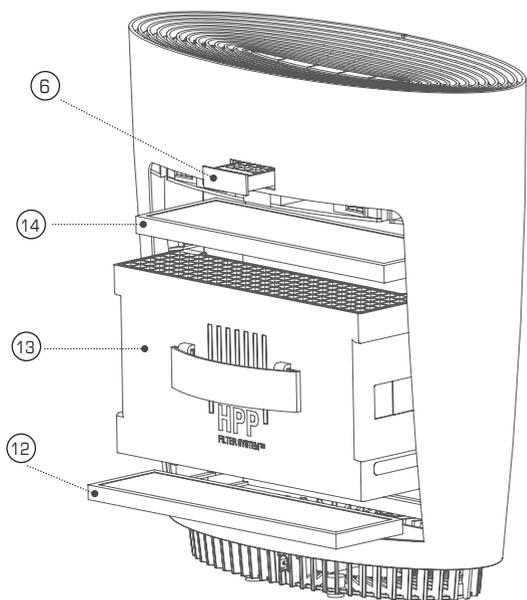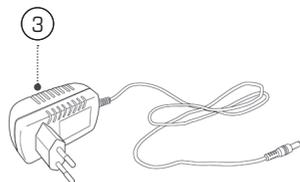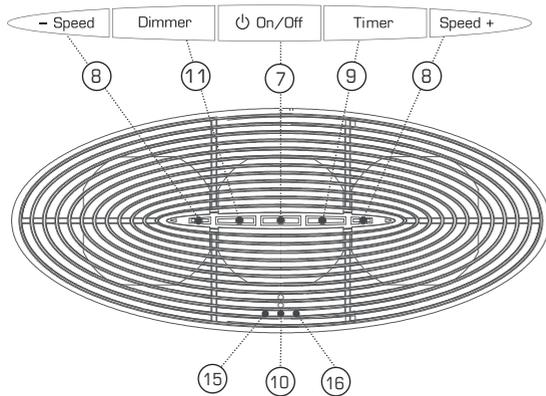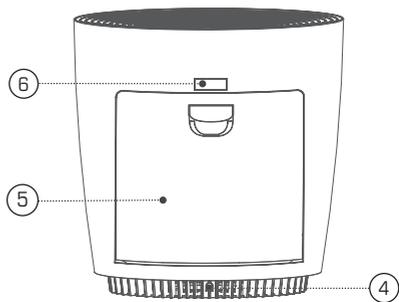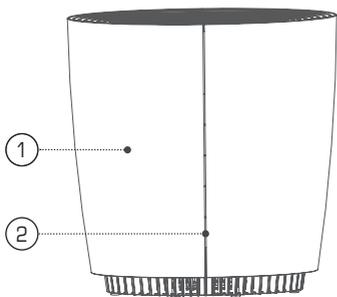

Congratulations! You have just acquired the exceptional Air purifier «Stylies Pegasus». It will give you great pleasure and improve the indoor air for you.

As with all domestic electrical appliances, particular care is needed with this model also, in order to avoid injury, fire damage or damage to the appliance. Please study these operating instructions carefully before using the appliance for the first time and follow the safety advice on the appliance itself.

IMPORTANT SAFETY GUIDELINES

- Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference; if necessary pass them on to the next owner.
- Coplax refuses all liability for loss or damage which arises as a result of failure to follow these operating instructions.
- The appliance can only be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health. Do not store or operate the appliance outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision. Children should be supervised to ensure that they do not play with the appliance.
- Only connect the cable to alternating current. Observe the voltage information given on the appliance.
- Do not use damaged extension cords.
- Do not run the power cord over sharp edges and make sure that it does not get trapped. Do not pull the plug from the socket with wet hands or by holding on to the power cord.
- Do not use this purifier in immediate vicinity of a bath tub, a shower or a swimming pool (observe a minimum distance of 3 m). Place the appliance such that a person in the bath tub cannot touch the appliance.
- Do not place the appliance near a heat source.
- Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example). Protect power cords from oil.
- The device must always be unplugged:
 - After each use.
 - In case of malfunction
 - Before any cleaning
 - Before the device is moved to another place
 - During storms
- Penetrating the housing with any kind of object is strictly prohibited.
- Make sure that the appliance is properly positioned to ensure a high stability during its operation and make sure that no one can trip over the power cord.

- The appliance is not splash-proof.
- Do not store the appliance outdoors. For indoor use only.
- Store the appliance in a dry place inaccessible to children (pack the appliance).
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- HPP-Filter: Failure to comply with the prescribed cleaning interval of 2 months results in a fire hazard!

DESCRIPTION OF THE DEVICE

The device consists of the following main components:

Drawing 1

1. Purifier
2. LED displays speed 1-5

Drawing 2

3. Adapter
4. Adapter plug socket
5. Purifier door
6. Fragrance tray

Drawing 3

7. On/Off Switch
8. Button for power setting
9. Button for timer
10. LED displays timer 2, 4 or 8 hours
11. Button for night mode
12. Pre-Filter
13. HPP™ Filter
14. Activated carbon filter
15. Function LED
16. Filter change LED

FIRST USE / OPERATION

1. Place the Pegasus air purifier on a flat surface in the desired area. Plug the adaptor (3) into a suitable electric socket.
2. Remove the activated carbon filter (14) from the polyethylene bag before operating.
3. Then switch on the appliance by pressing the on/off switch (7).
4. You can adjust the speed and thus the purification rate (volume per hour) by pressing power setting button (8) (one blue lamp for level 1, two blue lamps for level 2, etc.).
5. You can use the timer to set the desired cleaning time. To do this, press on the timer button (9). You can choose between the following periods: 2 hours, 4 hours or 8 hours. If you do not wish to use the timer, you may run the air purifier in continuous operation (no LED lamps illuminated).
6. If you find the lamps too bright (in a bedroom for example), you may reduce the light intensity by pressing the night mode key (11). The night mode can be switched off by pressing the key once again.
7. You may use the Pegasus air purifier to distribute fragrances in the room. Please be as economical as possible in the use of fragrances, because excessive quantities may lead to malfunctions and damage to the appliance. To use fragrances, remove the fragrance tray (6) from its mounting. Place no more than 1-2 drops of fragrance in the container and replace it in its designated position. If you wish to change the fragrance, you can wash out the fragrance container and fleece under running water.

FUNCTIONAL OVERVIEW

Preliminary filter

The preliminary filter removes large dust particles and pollutants from the air, thereby protecting the secondary filter from severe soiling and optimising its functionality. The preliminary filter can be vacuum-cleaned when the need arises. Because the filter material becomes worn in the course of time, the filter should be replaced at approximately 6-month intervals.

HPP™ Filter System

The HPP™ filter is the heart of the air purifier. It filters out viruses, bacteria, fine dust, pollen, dust mite excretions and mould fungi from the room air. Its high efficiency is ensured by the use of extremely powerful magnetic fields. The HPP LED (15) shows the function status of the HPP filter:

- LED is illuminated – HPP filter is installed and working faultlessly
- LED is not illuminated – HPP filter is not installed or does not work

The HPP filter must be cleaned every 2 months under cold running water using detergent (see chapter “Cleaning the filter”).

Activated carbon filter

The activated carbon filter is able to absorb airborne gases (unpleasant odours or tobacco smoke) thereby filtering them out of the air. Its capacity is finite for which reason the filter should be replaced at approximately 6-month intervals depending on the level of air contamination caused by unpleasant odours and tobacco smoke. Should it become apparent, even before the end of the 6-month period, that the unpleasant odours are no longer being adequately eliminated, this is a further indication that the filter should be replaced.

Fragrance compartment

The fragrance compartment fleece may be moistened with a few drops of fragrance (max. 1-2 drops). Pegasus will then give off the fragrance into the room air, generating an agreeable ambience. Please note: if used in excess, fragrances may attack and damage plastic. Therefore, please add no more than 1-2 drops to the fleece, and do not add any more until the first fragrance is used up. If in doubt, please wash out and dry the fragrance compartment and fleece.

Speed levels

The air purifier has 5 different speed levels for different applications:

Level 1, very quiet – e.g. for bedrooms overnight

Level 2, quiet – for bedrooms or smaller rooms

Level 3 for continuous daytime use in smaller rooms (25m²)

Level 4 for continuous daytime use in larger rooms (up to 50m²), e.g. open-plan kitchen/living room

Level 5, high-speed – for quick air purification or purification of heavily polluted air

Timer

The appliance switches off automatically after 2, 4 or 8 hours as you wish. Ideal for air purification when you leave the home but would like to have the air purified in your absence. The appliance can also be used without the timer and is suitable for continuous operation.

Night mode

Today, many appliances incorporate LED lights which are unsuitable for night-time use in a bedroom. In night mode, the light intensity is reduced to a pleasant level.

CLEANING THE FILTER

Prior to any maintenance work and after each use, switch off the appliance and withdraw the adaptor from the socket.


Never immerse in water (risk of short circuit).

- External surfaces should only be wiped off with a damp cloth and then dried well.
- The preliminary filter can be cleaned carefully with a vacuum cleaner. The filter should be changed at 6-month intervals.
- The activated charcoal filter cannot be cleaned and should be replaced at intervals of no more than 6 months.

A space in which to record the date is printed on the activated charcoal filter. Please enter the filter fitting date. Six months after the recorded date, replace the activated charcoal and preliminary filters.

Filter reminder function: the unit will count the unit working time until it reaches 2'160 hours. The LED (16) will flash in red, in order to remind, that the filters need to be changed. If you changed the filter, it can be reset by pressing the dimmer (11) button for 5 seconds. Then the LED will turn off and the unit will count the working time again.

The **Pegasus Combi Filter Pack** is available from your household appliance dealer for this purpose. Fine particles, viruses and bacteria accumulate in the HPP filter over the course of time. You should therefore wash out this filter under cold running water at 2-month intervals. The filter should then be allowed to dry outside the appliance. You may refit the filter when no water drops are visible inside.

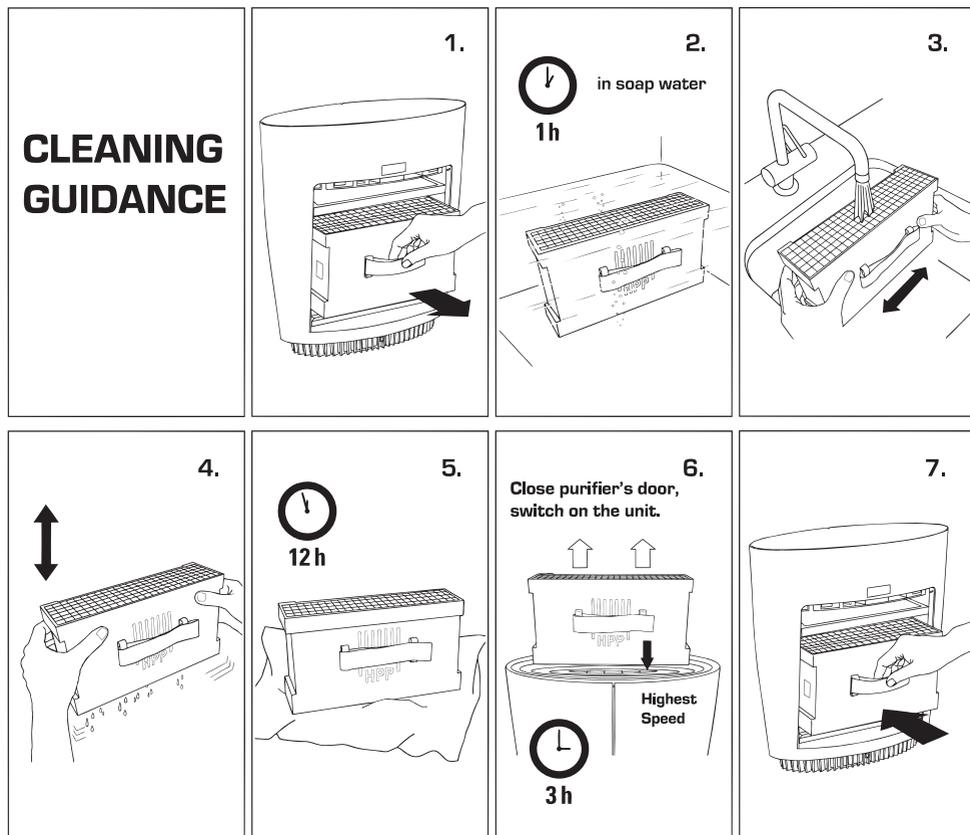

REPAIRS / DISPOSAL

- Repairs to all electric devices (including replacement of the power cable) may only be performed by instructed experts. Carrying out inappropriate repairs voids the warranty and no liability shall be accepted.
- If the power cable has become damaged, it must be replaced by the manufacturer, its service agent or similiary qualified persons in order to avoid a hazard.
- Never operate the device if the cable or the plug is damaged, after the device has malfunctioned, if it has been dropped or if it has been damaged in any other way (i.e. with cracks or

breakages to the housing).

- Do not use any sharp, abrasive objects or corrosive chemicals.
- Disable devices that are to be discarded immediately (by cutting off the power cable) and dispose of them at an appropriate waste collection centre.
- Do not dispose of electrical devices in the household refuse. Use the official recycling collection centres, where available.
- If electrical devices are disposed of in an unregulated way, the effects of weathering can cause hazardous substances to contaminate the groundwater and the food-chain or this can result in a burden on flora and fauna for years to come.

TECHNICAL DATA

Power (5 speed levels)	8-30 Watt
Dimensions	L 380 x H 395 x B 160 mm (Length x Height x Width)
Weight	ca. 3.80 kg
Shut off timer	2h, 4h, 8h
Adapter complies with EU regulations	CE/GS/ WEEE /RoHS
All rights for any technical modifications are reserved	



This device must not be disposed of with household refuse. Please dispose of this device at the appropriate waste collection centre. Collecting and recycling electrical and electronic waste saves valuable resources. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly way and ensure that it reaches the recyclable material collection centre.

TWO-YEAR WARRANTY

For the warranty period of 2 years after the purchase of the appliance, we will repair or replace with a refurbished product (at our option), without any cost to you for either the parts or labor, any machine or part that proves to be defective in materials or workmanship.

EXCEPT FOR THE WARRANTY PROVIDED ABOVE, Coplax DISCLAIMS ANY AND ALL OTHER IMPLIED WARRANTIES AND ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE PRODUCT FOR ANY PERIOD AFTER THE EXPIRATION. Coplax will, at its sole discretion, repair or exchange a product under warranty. NO credit will be issued. The remedies described above are your sole remedies in the event of any breach of the warranty provided above

WHO IS COVERED:

The original owner of a privately-owned Coplax appliance who can provide a dated proof of purchase in the form of an invoice or receipt is covered. The warranty is not transferable. The original dated proof of purchase (a copy needs to be faxed, e-mailed, mailed) prior to returning the unit. Provide the model number of your appliance and a detailed description (preferably typed) of the problem with the item. Enclose your description in an envelope and tape it directly to the appliance before the box is sealed. Do not write anything on or alter in any way the original box.

WHAT THIS WARRANTY DOES NOT COVER:

- Parts that normally require replacement, such as demineralization cartridges, Ionic Silver Cube, active carbon filters, water wick filters and any other consumable item that needs regular replacement except for material or workmanship defects.
- Damage, failure, loss or deterioration due to ordinary wear and tear from abuse, misuse, negligence, accident, faulty installation, placement and operation, improper maintenance, unauthorized repair, exposure to unreasonable temperatures or conditions. This includes damages caused by misusing essential oils or water treatment and cleaning solutions.
- Damage resulting from inadequate packaging or carrier mishandling of returned products.

- Misplacement or loss of accessories such as nozzle, fragrance capsule, water tank cap etc.
- Shipping and transportation costs to and from any place of repair.
- Direct, indirect special or consequential damages of any type, including loss of profits or other economic loss.
- Transportation damage of a unit shipped from one of our retailers. Please contact them directly.

This Warranty does not cover damages or defects caused by or resulting from failure to conform strictly to Coplax's specifications in connection with the installation, operation, use, maintenance, or repair of the Coplax appliance.